



8303爆炸图

零件号	零件名称	数量	零件号	零件名称	数量
BR8303-01	螺丝	1	BR8303-16	壳体	1
BR8303-02	火头	1	BR8303-17	扳机	1
BR8303-03	锁紧环	1	BR8303-18	O型圈	2
BR8303-04	轴承	2	BR8303-19	扳机销	1
BR8303-05	内齿环	1	BR8303-20	开闭销	1
BR8303-06	三芯架	1	BR8303-21	O型圈	1
BR8303-07	齿轮销	3	BR8303-22	O型圈	1
BR8303-08	齿轮	3	BR8303-23	弹簧	1
BR8303-09	气缸前盖	1	BR8303-24	衬套	1
BR8303-10	钢珠	3	BR8303-25	调速钮	1
BR8303-11	转子	1	BR8303-26	O型圈	1
BR8303-12	叶片	6	BR8303-27	O型圈	1
BR8303-13	气缸	1	BR8303-28	螺帽	1
BR8303-14	气缸后盖	1	BR8303-29	消音盖	1
BR8303-15	轴承	2	BR8303-30	进气接头	1